

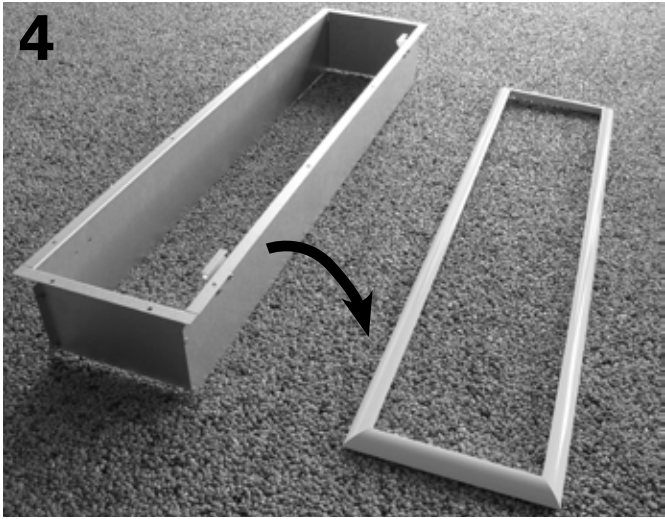
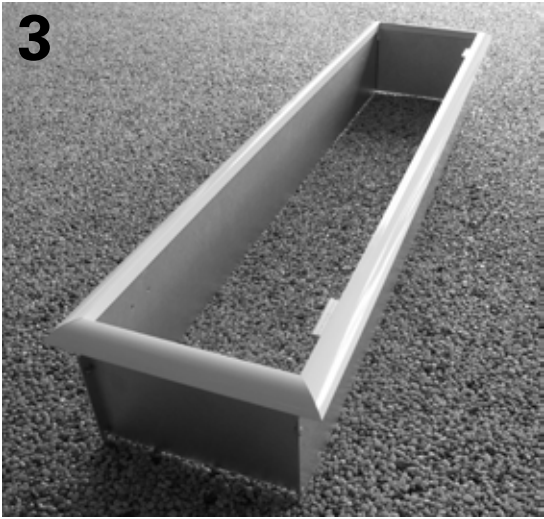
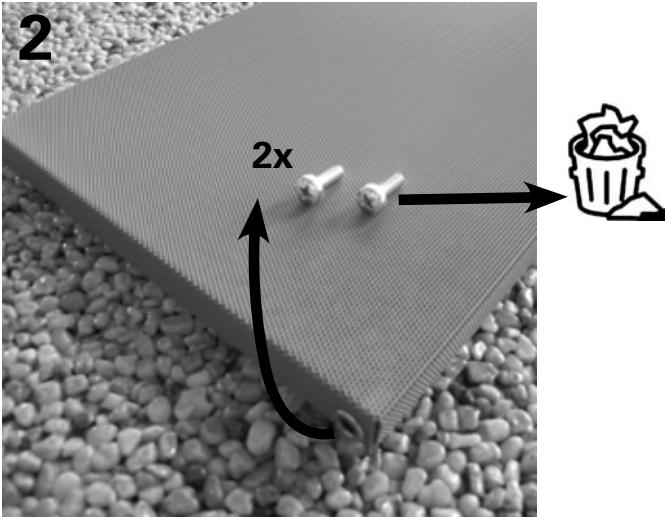
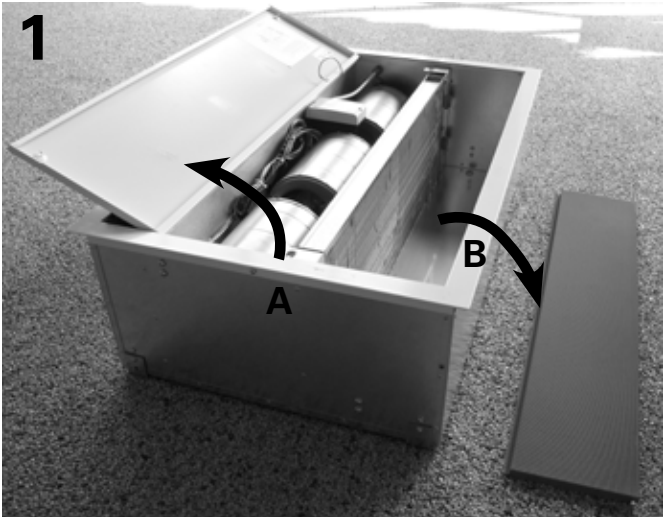




# Outlet/inlet extension AR35XTT10/15/20


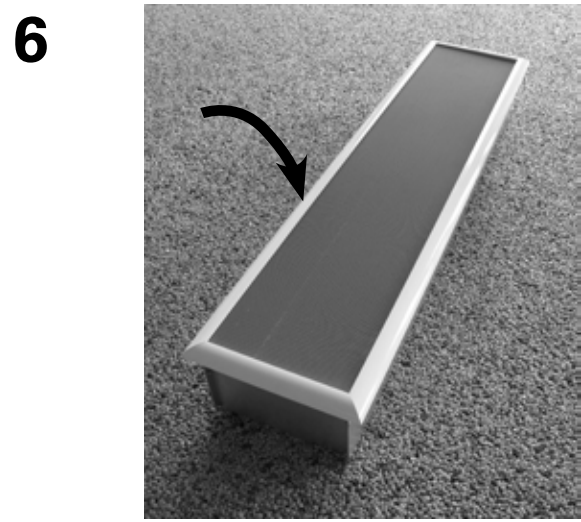


AR35XTT - Inlet part 1

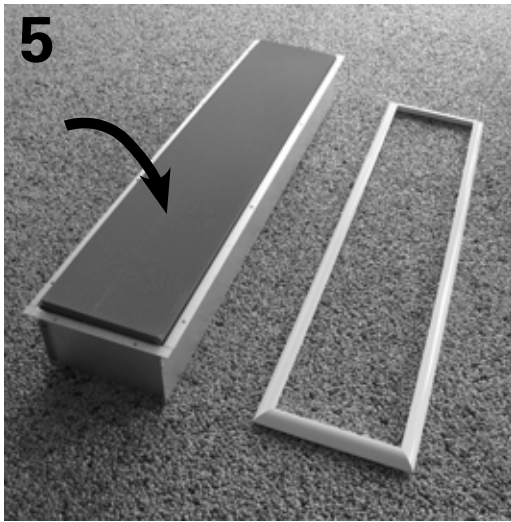


AR35XTT - Inlet part 2

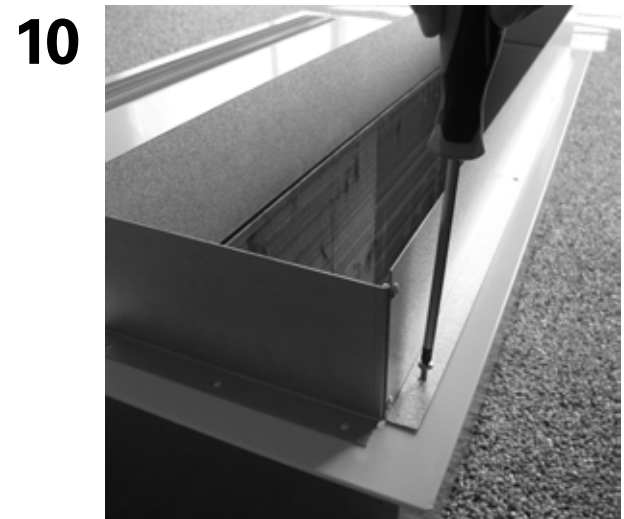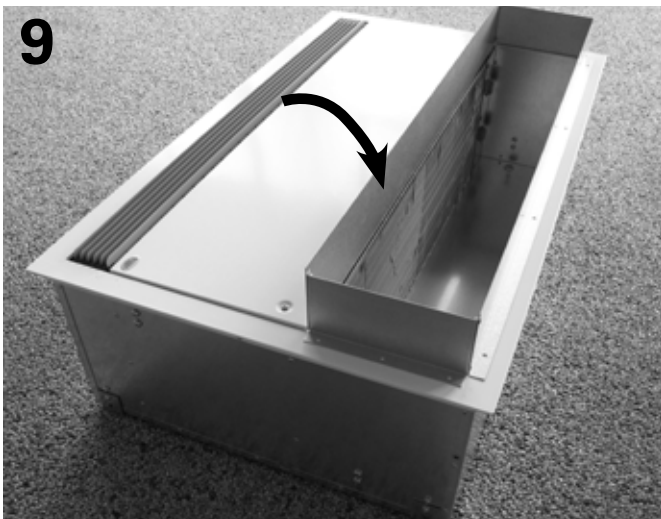

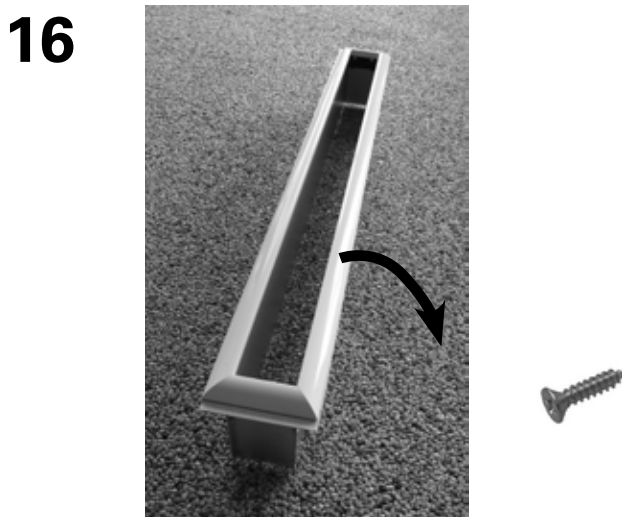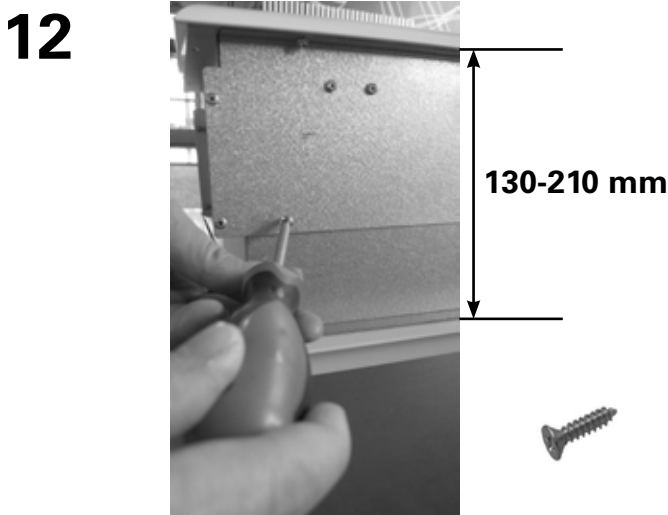

AR35XTT - Outlet part 1

17

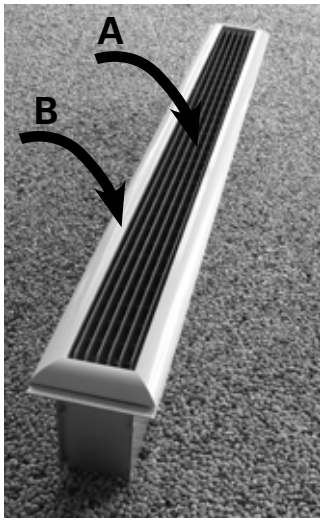

18



AR35XTT - Outlet part 2

19



20



130-210 mm



**Main office**

Frico AB  
 Box 102  
 SE-433 22 Partille  
 Sweden

Tel: +46 31 336 86 00  
 Fax: +46 31 26 28 25  
 mailbox@frico.se  
 www.frico.se

**For latest updated information and information  
 about your local contact: [www.frico.se](http://www.frico.se)**